



Artikel Item	Art. Nr. Art. No.	VPE	Inhalt ml Content fl. oz	Ø mm	Höhe mm Height mm	Gewicht g Weight gramm	EAN/St. EAN/pc
CIELO							
 Teller flach Fahne 16cm Plate flat with rim 16cm	D400.016.0000	4		160	15	190	4001836125390
 Teller flach Fahne 20cm Plate flat with rim 20cm	D400.020.0000	4		200	10	305	4001836125406
 Teller flach Fahne 27cm Plate flat with rim 27cm	D400.027.0000	4		278	25	680	4001836125413
 Teller flach Fahne 31cm Plate flat with rim 31cm	D400.031.0000	4		315	20	1045	4001836125444
 Gourmetteller flach breite Fahne 27cm Gourmetplate flat wide rim 27cm	D400.028.0000	4		272	20	665	4001836125437
 Gourmetteller flach breite Fahne 32cm Gourmetplate flat wide rim 32cm	D400.032.0000	4		320	20	980	4001836125451
 Gourmetteller tief Fahne 29cm Gourmetplate deep with rim 29cm	D400.129.0000	4	375ml 12,75oz	290	40	830	4001836125468
 Gourmetteller tief breite Fahne 30cm Gourmetplate deep wide rim 30cm	D400.130.0000	4	290ml 9,75oz	300	40	890	4001836125475
 Dipschale hoch 8cm Dip dish tall 8cm	D400.308.0000	4	120ml 4oz	80	50	102	4001836123051
 Bowl 9cm (235ml) Bowl 9cm (235ml)	D400.309.0000	4	235ml 8oz	93	70	180	4001836123068
 Schale 12cm (410ml) Bowl 12cm (410ml)	D400.312.0000	4	410ml 14oz	117	70	225	4001836125499

Cielo

Form D400

Artikel Item	Art. Nr. Art. No.	VPE	Inhalt ml Content fl. oz	Ø mm	Höhe mm Height mm	Gewicht g Weight gramm	EAN/St. EAN/pc
CIELO							
Espresso-Tasse 0,09l Espresso Cup 0,09l	D400.409.0000	4	90ml 3oz				4001836126717
Espresso-Unter- tasse Espresso Saucer	D400.459.0000	4		120	15		4001836126731
Kaffee-Tasse 0,18l Coffee Cup 0,18l	D400.418.0000	4	180ml 6oz				4001836126748
Kaffee-Tasse 0,24l Coffee Cup 0,24l	D400.424.0000	4	240ml 8oz				4001836126755
Cappuccino-Tasse 0,34l Cappuccino Cup 0,34l	D400.434.0000	4	340ml 11,5oz				4001836126762
Kombi-Untertasse 16cm Multi Purpose Saucer 16cm	D400.469.0000	4		160	15	175	4001836125482

